 


## Mode 1

 


Press 'Start' button




Waiting to start  
release hand throttle trigger


Turn off track power




Countdown 1 second

 


Countdown 2 seconds

 


Countdown 3 seconds

 


Countdown 4 seconds

 

Countdown 5 seconds

 


Random delay 0 to 3.5  
seconds

 


'Go' Race starts

Turn on Track Power


## Mode 2

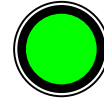

Press 'Start' button

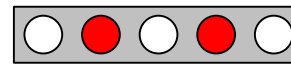

 
Waiting to start  
release hand throttle trigger




Countdown 1 second



 
Countdown 2 seconds




Countdown 3 seconds

 


Countdown 4 seconds

 

Countdown 5 seconds

 

Random delay 0 to 3.5  
seconds

 


'Go' Race starts

## Mode 3



Press 'Start' button

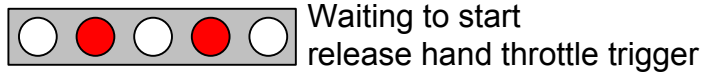

If Jump Start is detected at anytime during the countdown sequence, countdown aborts and track power is removed.

Displays for 15 seconds then clears and restores power to track, or until Start button is pressed.




Track 1



Track 2

Jump Start indicator

## Mode 4

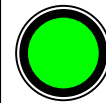


Press 'Start' button

 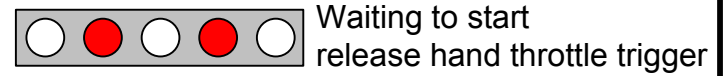

Only displayed if a Jump Start detected during the countdown.

 Displays for 15 seconds after race start then clears, or until Start button is pressed.



Track 1

Track 2

Jump Start indicator