


LED Cube Component Overlay

The silk screen on the PCB does not mark the location of the link wires.

The first step during assembly of the PCB should be the installation of 16 wire links into the positions indicated by the yellow lines in photograph of the PCB shown below.

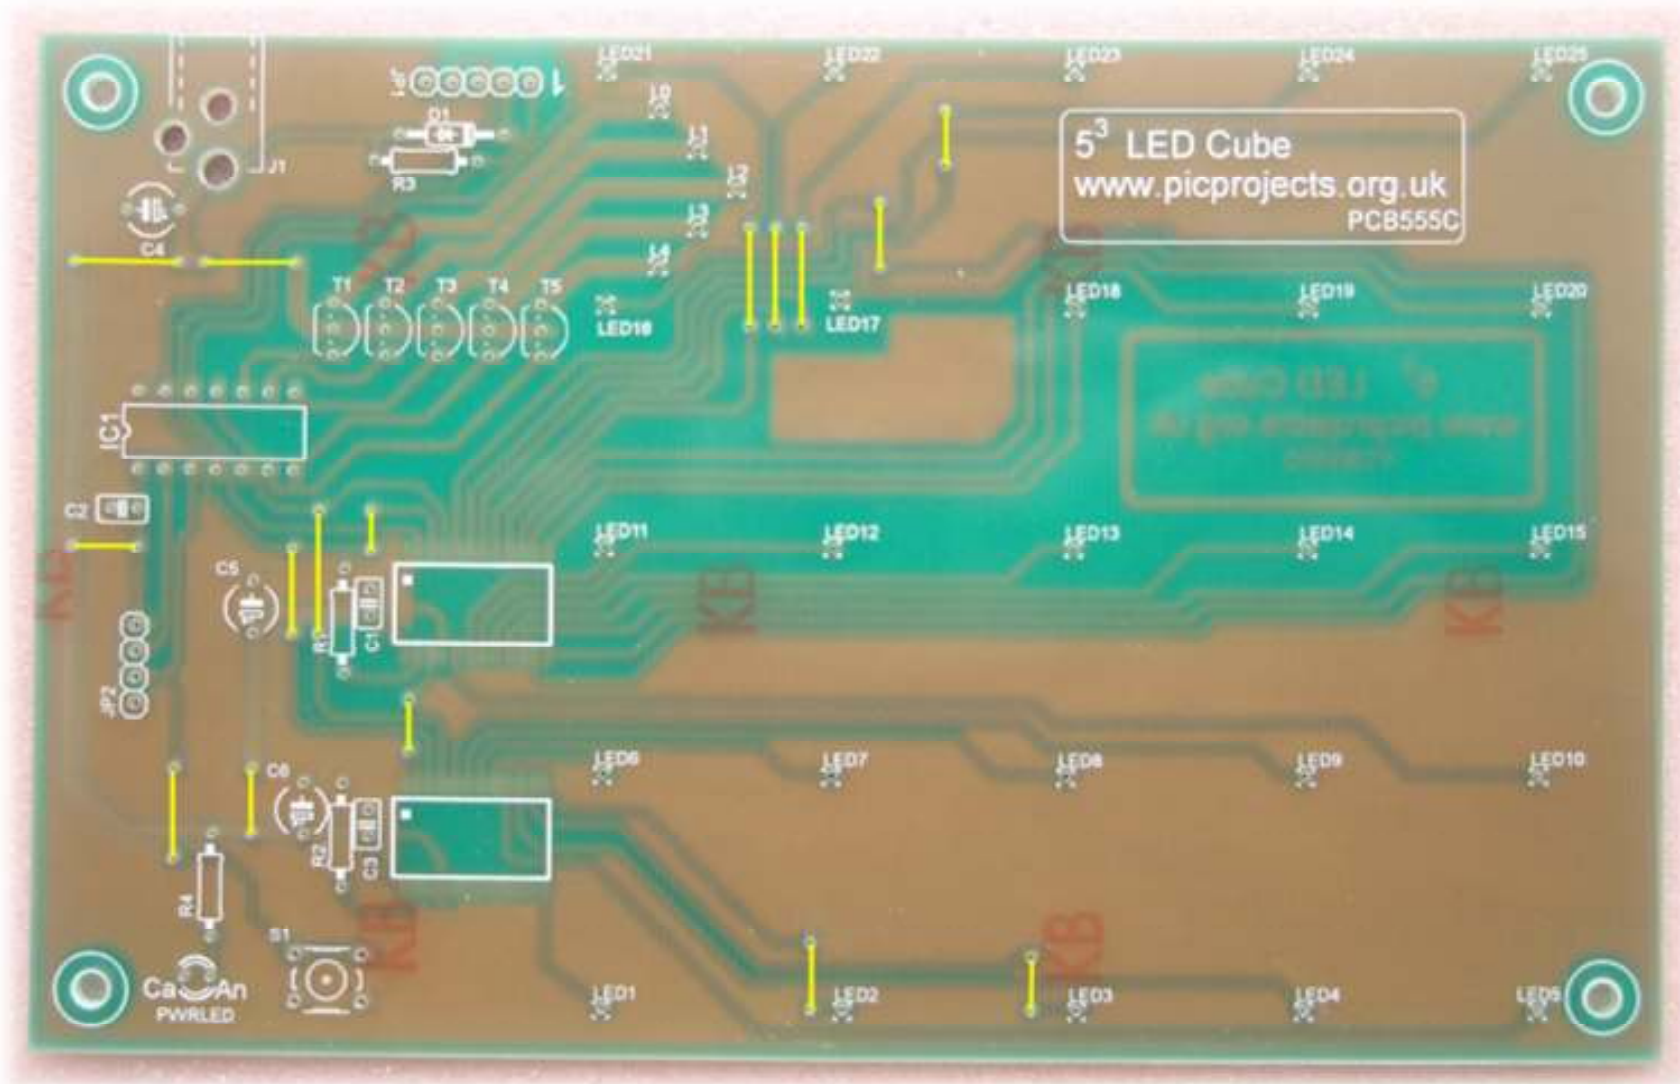

No scale